


PLATFORM ROOF BASKET SPECIAL FOR JEEP WRANGLER JL INSTALLATION INSTRUCTIONS




1. Install corners and connect the corners to the frame.

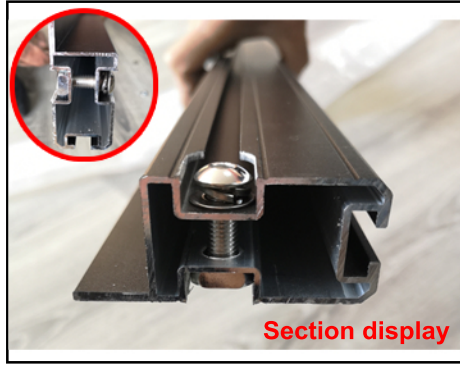

2. Pass the screw through the hole of the side beam, use a wrench to penetrate it to another hole, and hold it with a square nut, and finally use a wrench to tighten the screw.



3. Assemble the other three corners in turn.

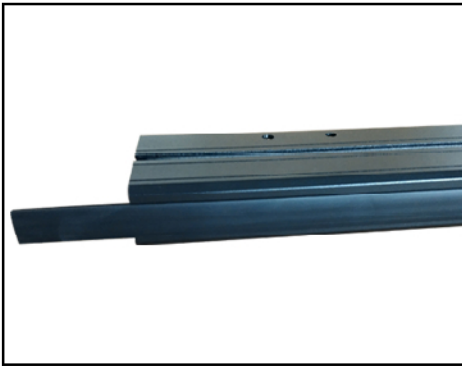


4. Slide one long rubber into front groove of the foremost platform tube.



5. Install the bottom plate, match the bottom plate to the hole of the frame, and fix it with screws.



6. The installation is complete.

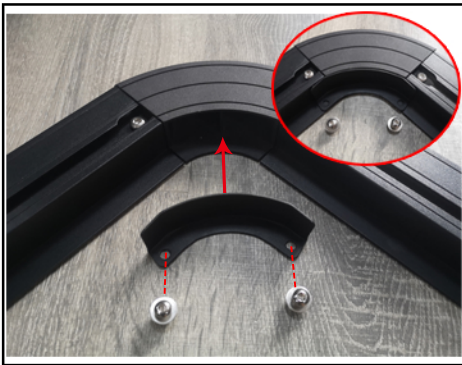

7. As shown in the picture, to install the corner reinforcement accessories, you need to perforate and install



8. Put to slider.



9. Match the bracket hole position to the slider, and then tighten with screws.



10. Put the frame of the assembled bracket on the roof of the vehicle, adjust the bracket to the proper position on the roof, and fix it with screws.



11. The flat roof basket is installed.