



OUTLAW
S E R I E S

Installation Instructions

817745


2016-22 CHEVROLET CAMARO SS

6.2L ENGINE

This kit does NOT fit vehicles with Performance Exhaust Option (Quad Tip).

PACKING LIST

<u>Qty</u>	<u>Description</u>	<u>Part#</u>
1	Right Muffler Assembly	815430-427
1	Left Muffler Assembly	815430-428
1	Hardware Pack	PK821
2	2 3/4" Clamp	MC234BS
2	7/16" Hanger Keepers	HW502

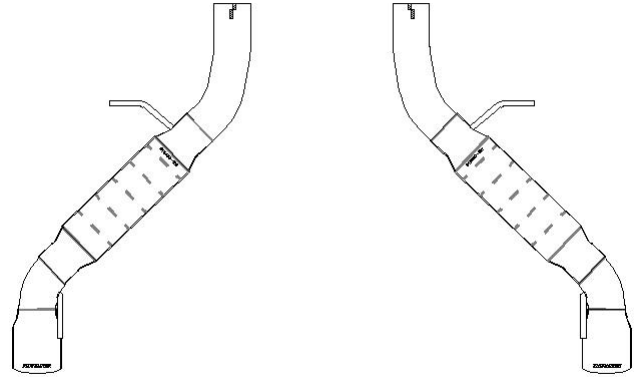

Removal:

Rev. 1/19/2022

1) Raise the vehicle and support securely with stands. To ease the removal of the stock system, spray a penetrating lubricant onto the rubber hangers just behind the rear differential and also at the rear of the vehicle.



2) Begin by measuring back 1 1/2" from the rear of the suspension cross-member shown in the photos above and make a mark on both pipes. Support the exhaust system both in front and behind the area to be cut, then once you've double checked that the measurements are correct, cut both pipes at the marks. **Note: Use caution when cutting!**



3) After cutting the two front pipes and with the factory muffer still supported, remove the two hangers at the front of the muffer from the rubber mounts on the vehicle. You can now lower the supports at the front of the muffer and slide the muffer forward to disengage the rear hangers from the mounts on the vehicle. Lower the muffer and set aside. Carefully deburr the end of the pipes where cut with a file or die grinder. Then using a 15mm wrench, unbolt the two factory hangers at the rear of the vehicle from the frame, as you remove them, place them with the corresponding side of the factory muffer.

Installation:



1) Place the new Flowmaster muffer units next to the factory unit and swap the rear hanger mounts from the stock muffer to the Flowmaster assemblies.



2) Slide a provided 3" clamp onto the factory inlet pipes, then place the right muffer assembly **#815430-427** up into position and slide the inlet onto the factory pipe approximately 3.00". Support the assembly with a stand and remount the rear hanger mount to the frame and tighten securely. Then connect the hanger at the front of the muffer to the rubber mount on the vehicle. Leave the clamp on the inlet loose for now. Repeat this step with muffer assembly **#815430-428** on the left side of the vehicle.



3) Adjust and level the two muffler assemblies to provide a satisfactory fit. They can also be adjusted forward or back to get the desired position in the rear bumper cut-outs. A minimum of 1/2" clearance around all parts of the system must be maintained; while keeping suspension travel and vibration in mind. After adjustments have been made, and you are satisfied with the fit, you may now securely tighten the two muffler inlet clamps.

4) For a more secure installation, we highly recommend placing a minimum 1" weld on either side of the inlet slip-fit connections. Place the included 7/16" hanger keepers onto the ends of the hangers at the front of each muffler and slide up to the rubber mount, these will prevent the hangers from slipping out of the rubber mounts.