## **Kit Contents**

Item#	Quantity Reqd.	Description
1	1	Front Crossbar
2	1	Rear Crossbar
3	4	Crossbar Covers


# **Hardware Kit Contents**

Item #	Quantity Reqd.	Description
1	1	Torque Tool
2	1	User's Manual
3		
4		
5		


# 1. Remove Covers



NOTE: Be careful during installation to prevent scratching of roof rails and vehicle roof. Cover vehicle with a protective covering.

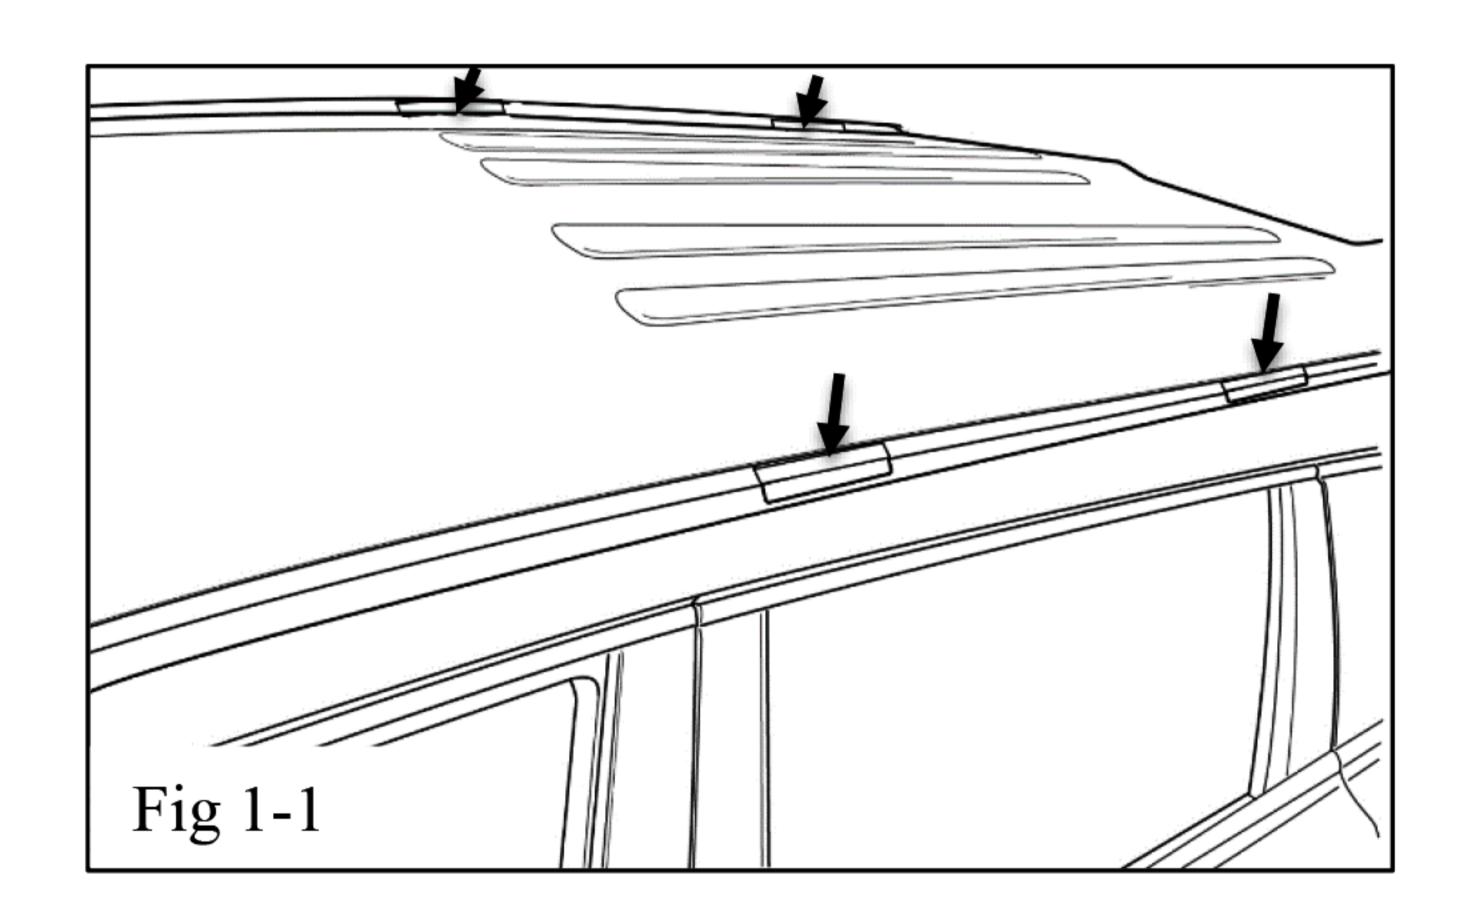


(a) Locate 4 covers on side rails on roof of vehicle (Fig. 1-1).

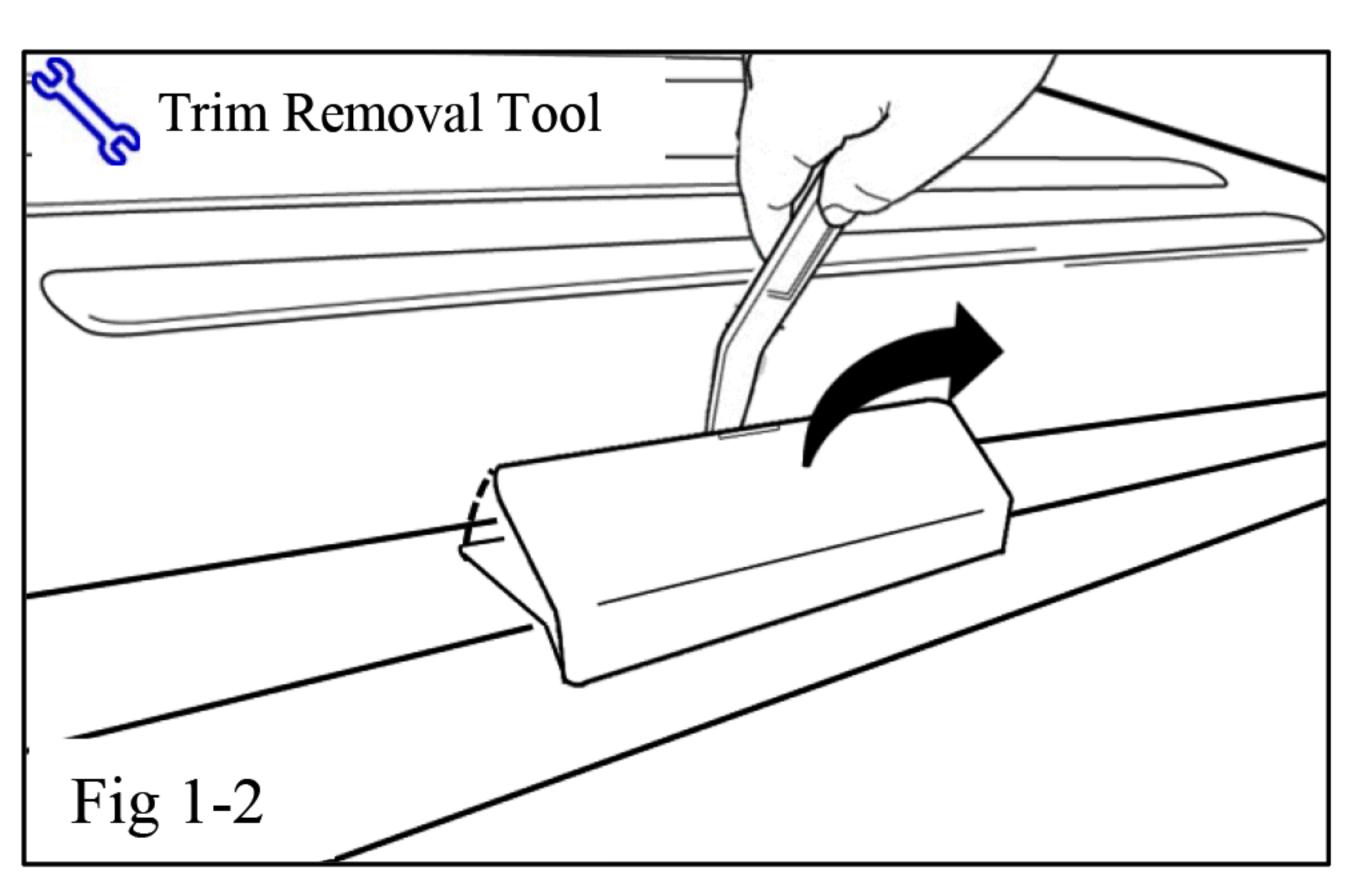




(b) Use Trim Removal tool to remove side rail caps by prying up from inner side and rotating outward as shown (Fig. 1-2). Place the caps in the supplied plastic bag and retain for use in Step 4.

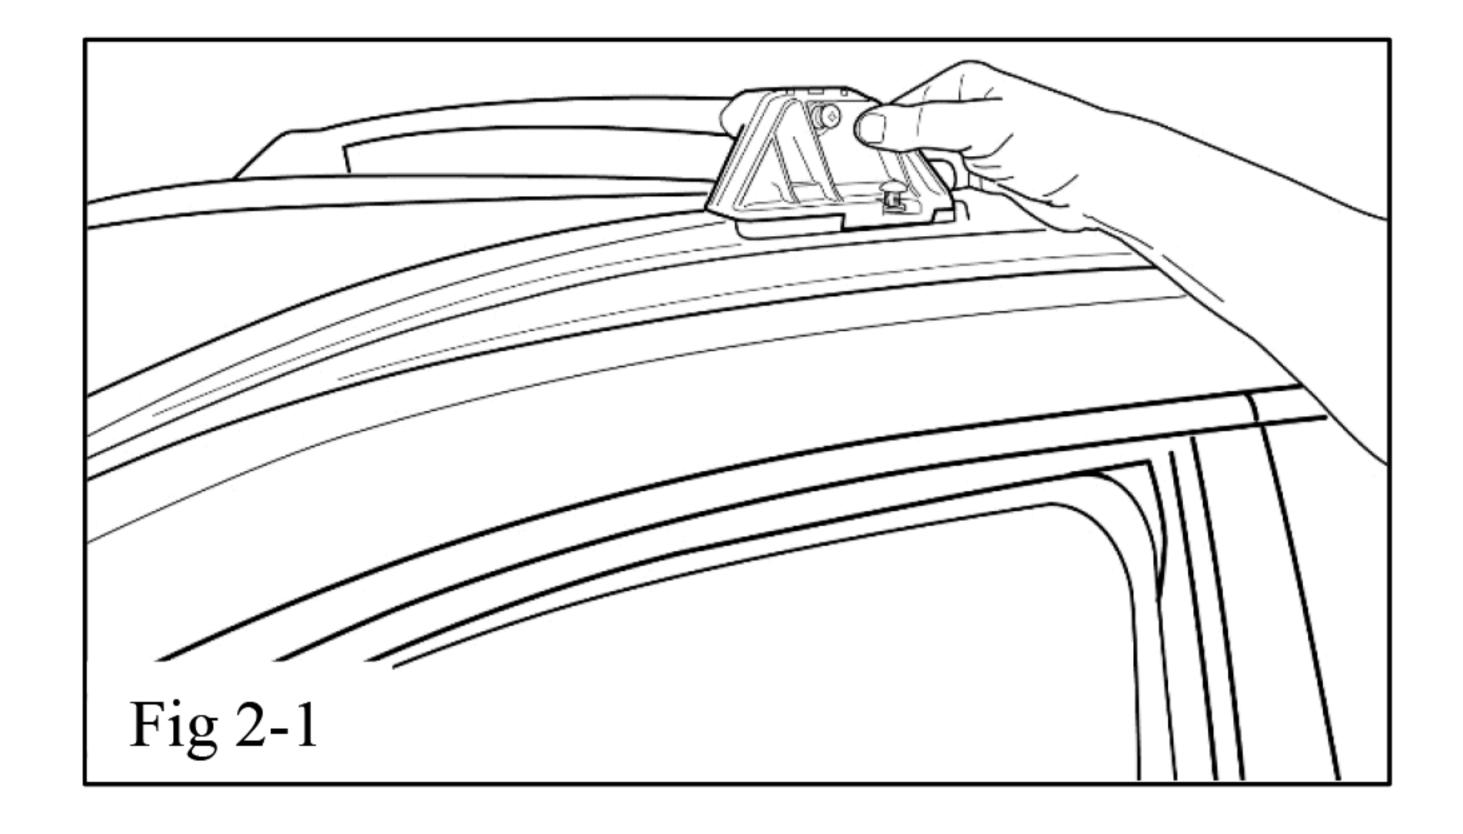


#### 2. Install Crossbars

- (a) Place crossbar over roof side rails aligning the bolt in the stanchion over the threaded hole in the roof side rail (Fig. 2-1).
- NOTES: Ensure crossbars are in correct position by designations on stanchions LHF, RHF, and LHR, RHR.
  - (b) Hand start the bolt into the threaded hole in the roof side rail.

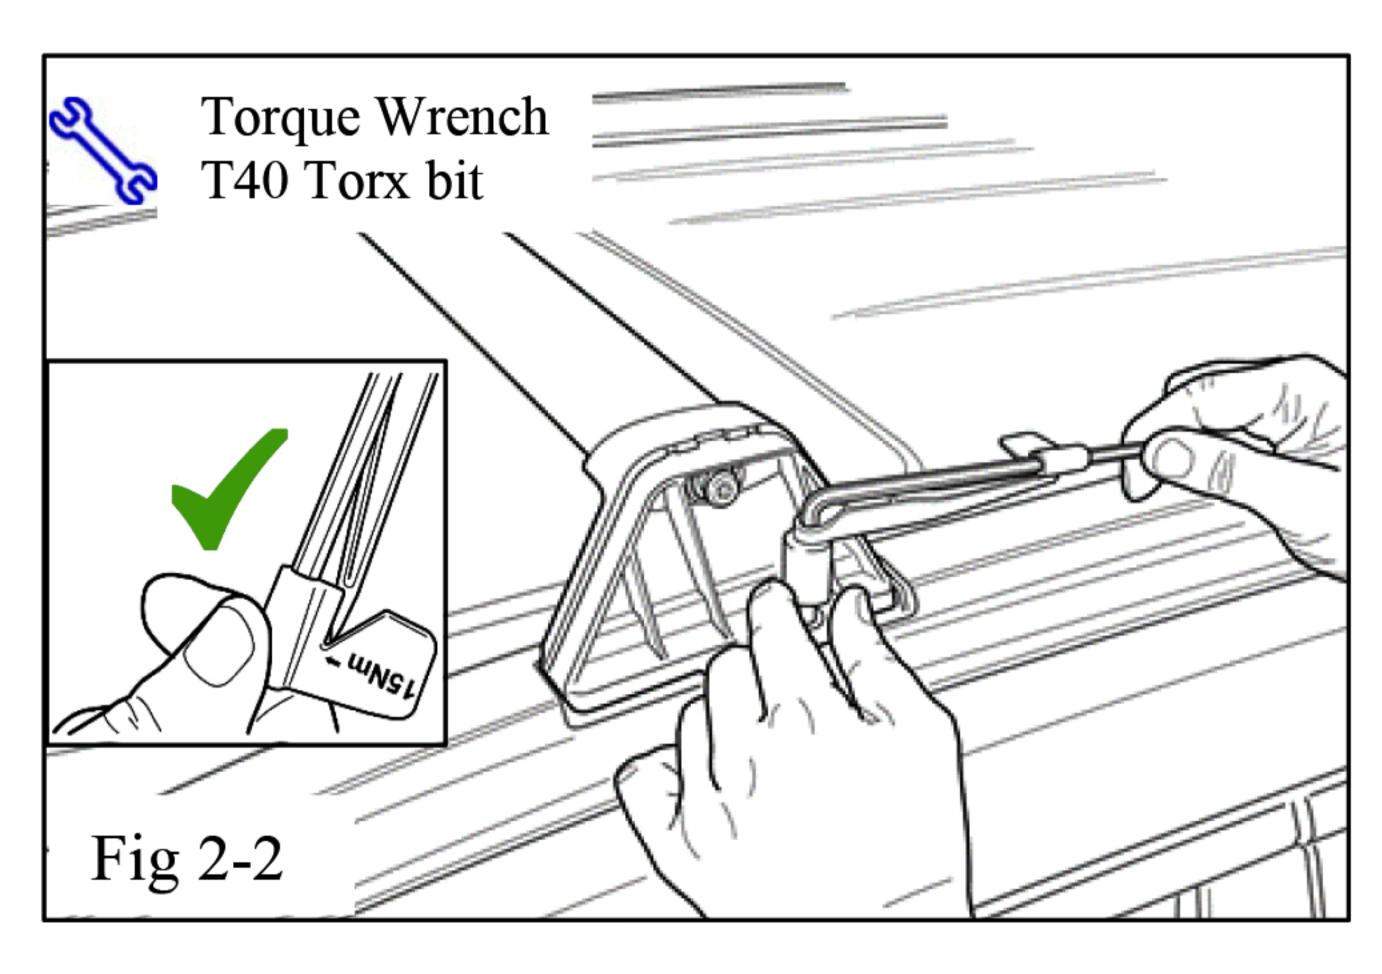




(c) Torque the T40 bolts to 15 N-m (11 ft-lbs) (133 in-lbs) (Fig. 2-2).

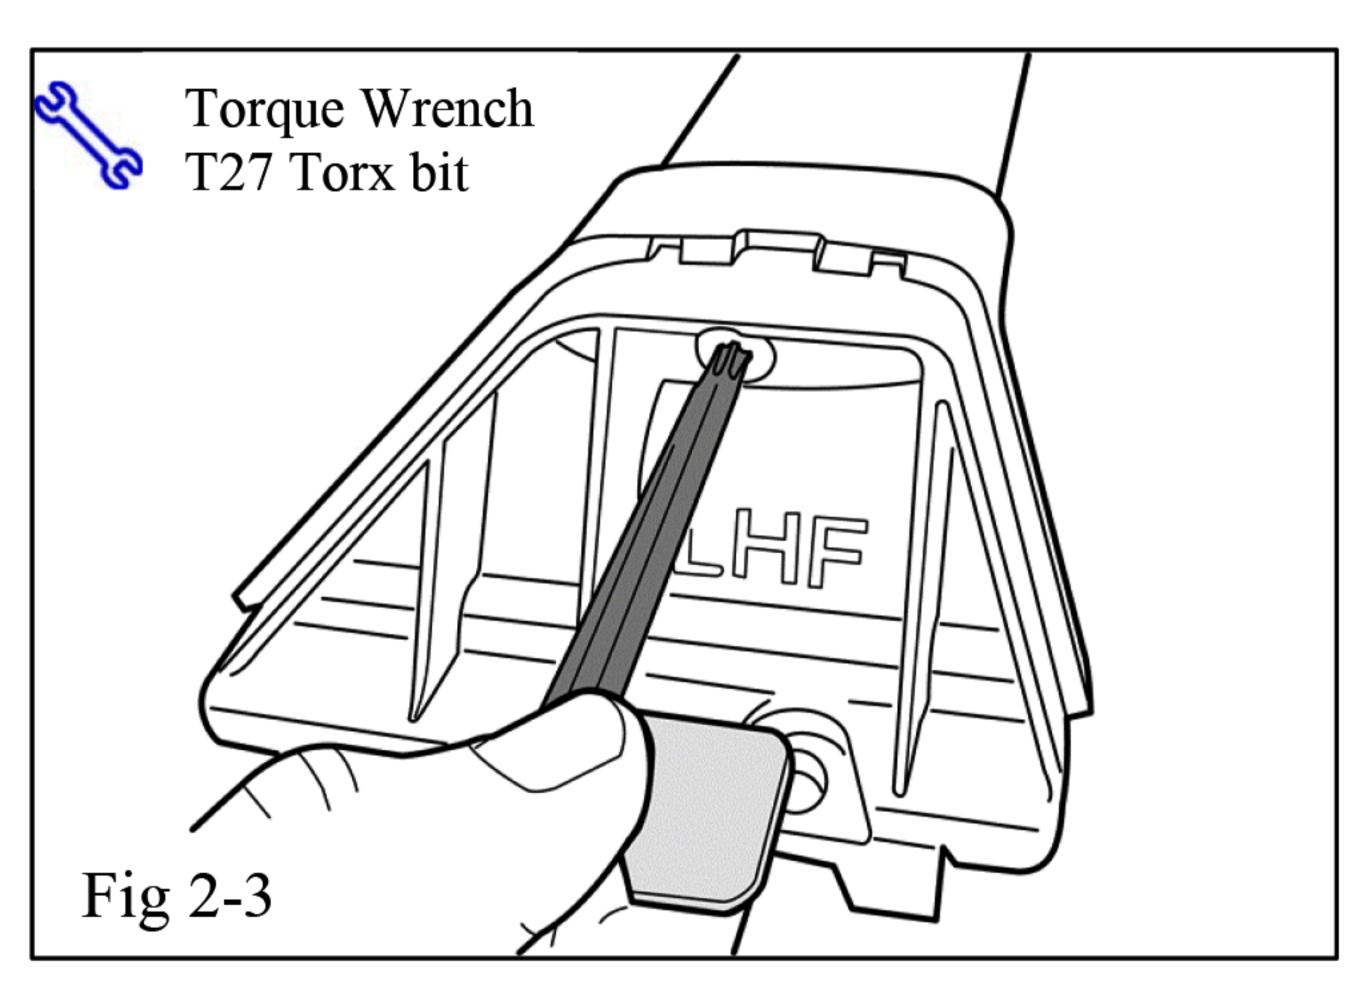




(d) Torque the T27 crossbar attachment bolts on the LH side to 2.5 N-m (1.8 ft-lbs) (22 in-lbs) (Fig. 2-3).

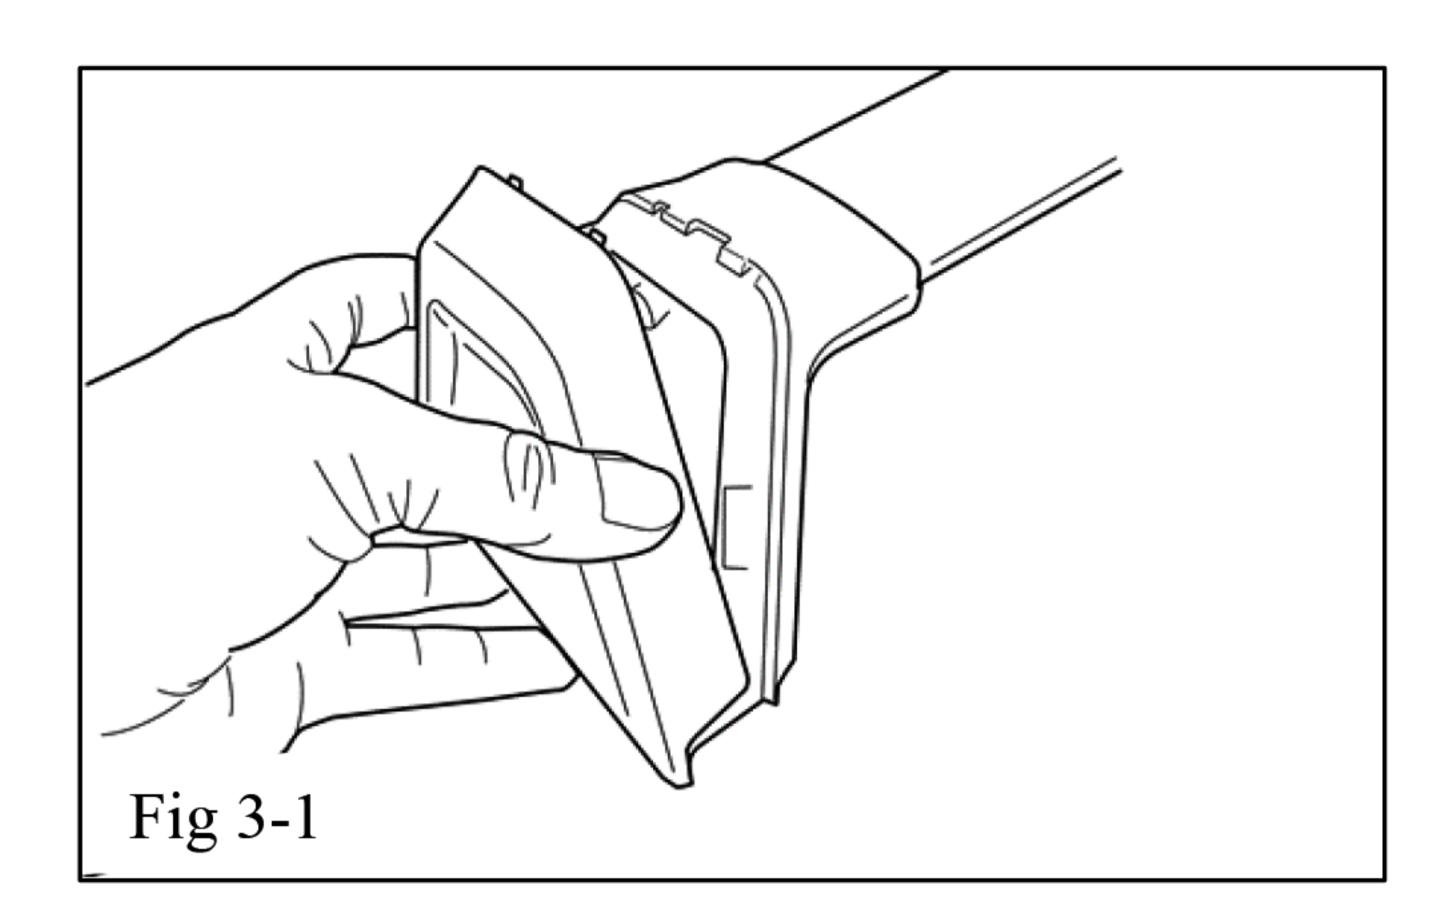

### 3. Install Covers Onto Crossbars.

(a) Identify the corresponding crossbar stanchion cover (LHF/LHR,RHF,RHR) and align with the bottom of the stanchion (Fig. 3-1).

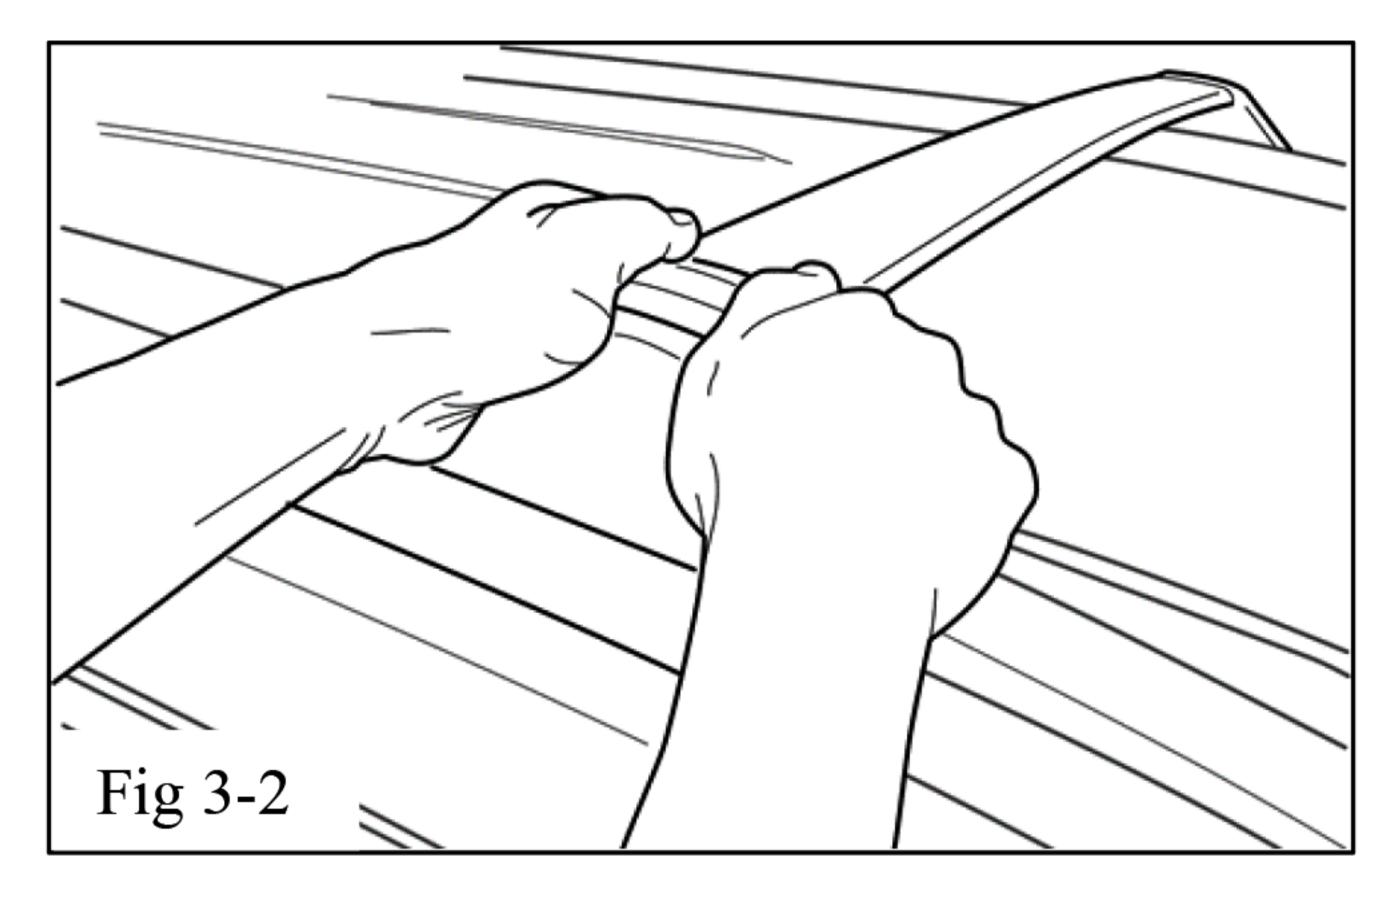

(b) Rotate the top of the cover toward the stanchion and use both hands to firmly press to snap the top and side tabs into place (Fig. 3-2).



NOTE: Check the fit of the cover to the stanchion to ensure covers are seated properly at top and along all edges after snapping into place.

(c) Repeat steps (2) through (3) with the second crossbar.

# 4. Complete Installation

Place the torque wrench, user's manual and bag with the side rail caps in the supplied plastic bag. Place this bag in the glove box.